


**MOBILE CHANDELIER 14  
PENDANT, 2019**

Black Patinated Brass  
Mouth blown opaline spheres  
Pendant rod length to order





**OVERALL DIMENSIONS**

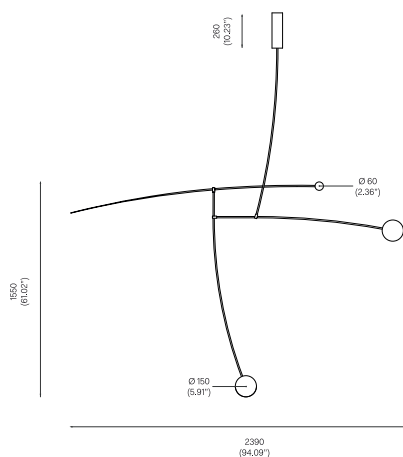


**BACKPLATE DIMENSIONS**


Mounting screws not included.

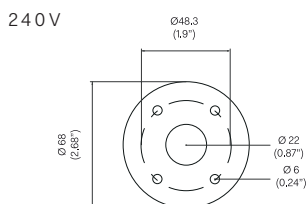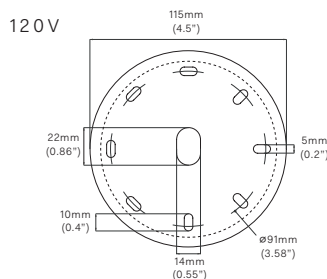

**STANDARD MATERIAL/FINISH**



**CUSTOM FINISHES**



**LIGHT SOURCE SPECIFICATIONS**

Integrated LED 9W for Ø150mm sphere  
750lm / 2700K / 80CRI

Integrated LED 3W for Ø60mm sphere  
350lm / 2700K / 80CRI

**PRODUCT SPECIFICATIONS**

Input voltage: 120V / 240V  
Maximum wattage: 21W  
120V / 240V dimmable 0/10V  
(DALI2 or Casambi on request)  
Product weight: 15kg  
IP 20 Indoor use only  
(suitable for bathroom Zone 3)

Please supply required drop length of fixture,  
measured from the ceiling to bottom of fitting  
at time of order.

Minimum total drop length 2752mm.  
Maximum total drop length 3562mm.  
Maximum total drop length with  
extension rod 5582mm.  
Please allow 25mm tolerance of drop length.

120V version supplied with paintable junction  
box cover.

Due to the handmade nature of this product  
dimensions may vary up to 10% for balancing  
purposes.

**CLEANING INSTRUCTIONS**

Before cleaning, lighting fixtures must  
be turned off and unplugged from mains  
electricity. Whilst cleaning please take care  
and use the gloves provided.

Patinated Finish: Use a dry soft dust cloth  
and gently go over marks until clean. The  
brass patina is achieved through an artisanal  
technique of applying pigments by hand  
during a hot patination process. Through this  
alchemic process, the brass is transformed  
whilst retaining the material's inherent  
qualities. It will mature and change overtime.  
The manner and speed in which it will change  
will depend on the environment, handling  
and the level and frequency of maintenance.  
Verdigris can also appear when the copper in  
the brass begins to oxidise.

Satin Brass: As the item is unlacquered it will  
naturally oxidise and darken. Upon touching  
the items without gloves, fingerprints are likely  
to occur and leave marks. Use a good quality  
brass cleaning liquid and follow the product  
instructions using the extra soft dust cloth.  
Do not apply pressure on persistent marks.  
Remove them using repeated gentle motions  
and by reapplying the brass cleaning liquid.

Opaline Glass: Remove the opaline glass from  
the product. Using a lightly damp cloth, clean  
only the outside of the sphere. Only put the  
glass sphere back on the product once it is  
fully dry.